
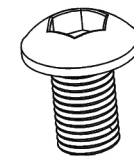


# PRO-GAMER

by YUMISU


## D2000-L

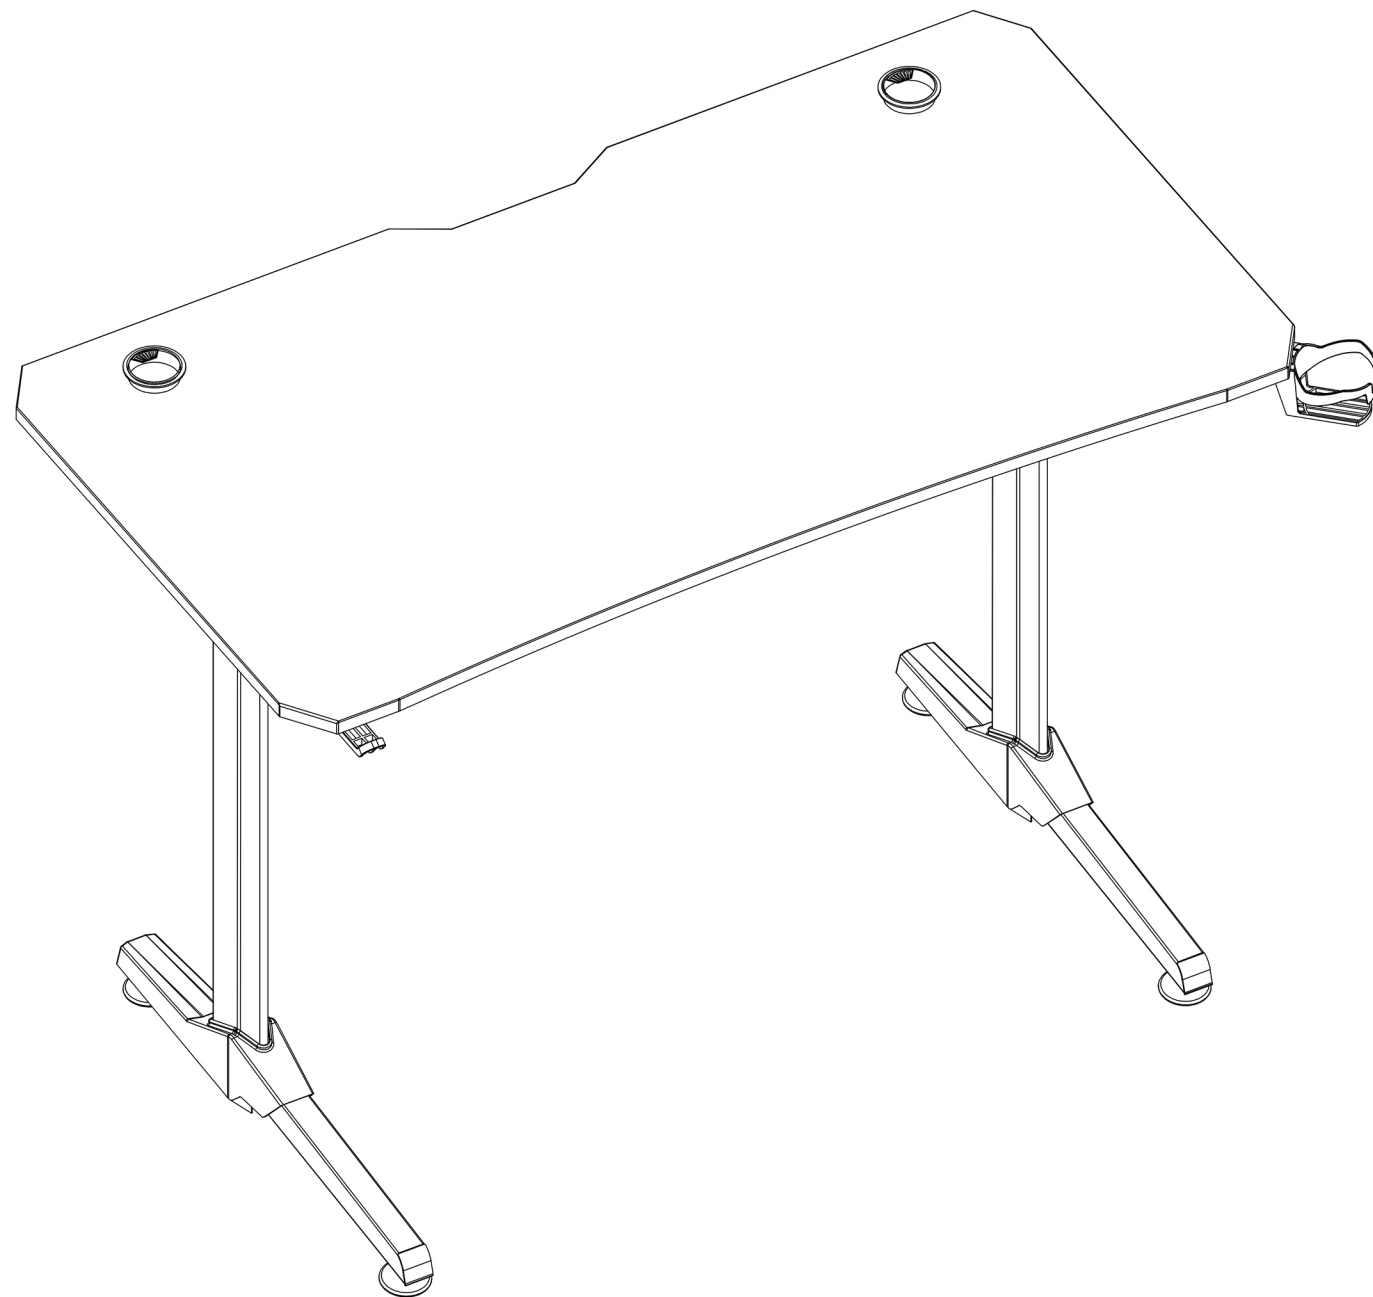


S1 x10




S2 x2




S3 x24

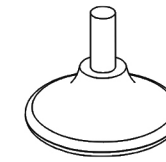


S4 x4

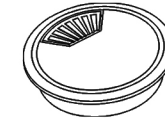


S5 x2

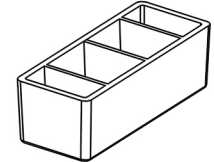


S6 x1

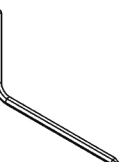


S7 x1

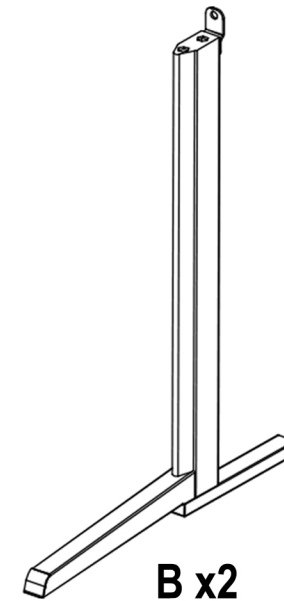


B x2

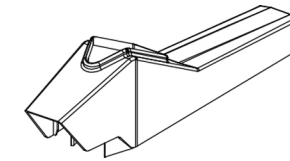


A x2

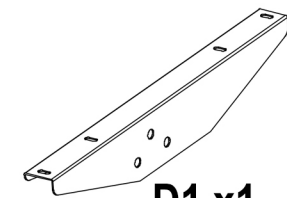


D1 x1

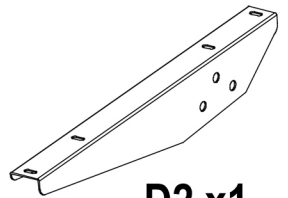


D2 x1

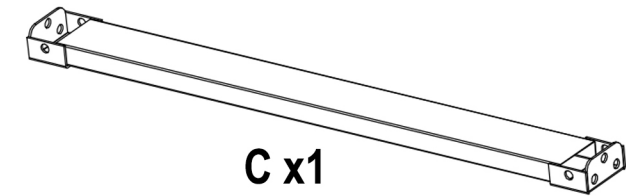


C x1

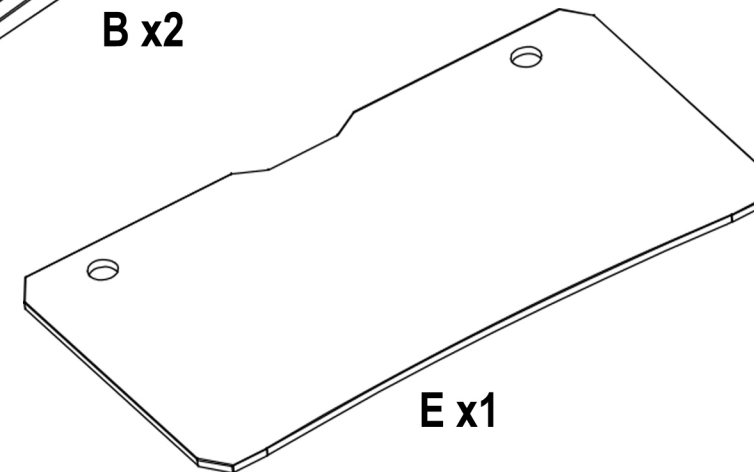


E x1

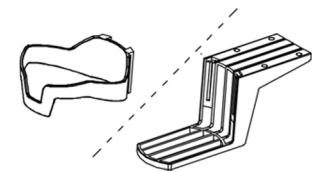

F x1

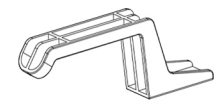


G x1

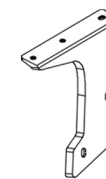

H1 x1




H2 x1

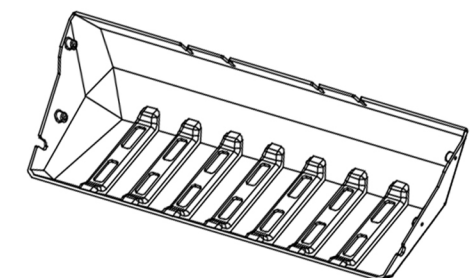


I x1

# 1

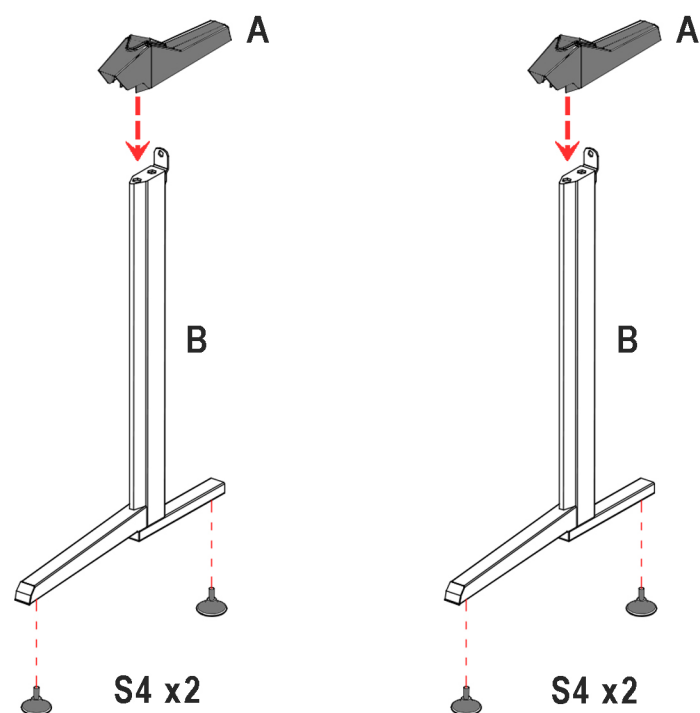


# 2

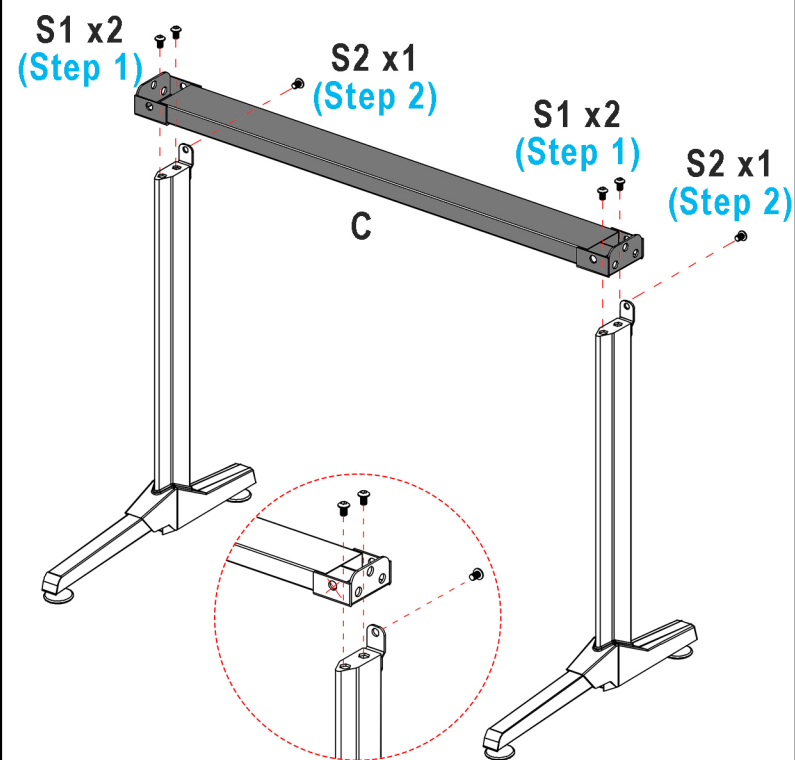


First put all the screws into the holes.  
Second tighten the screws.  
Third check all screws are tightened.

# 3

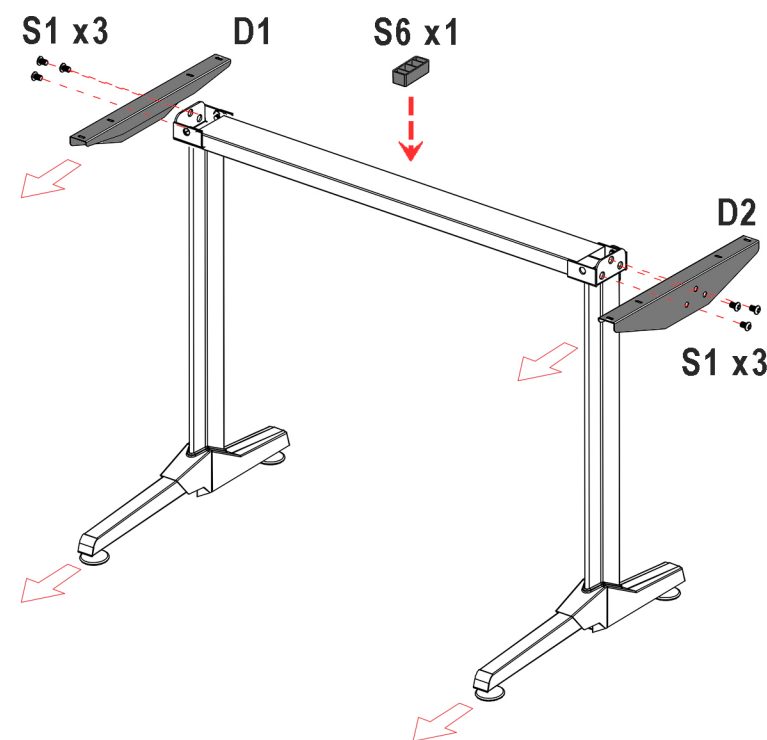



Please pay attention to the installation  
direction of D1 and D2 parts.

# 4

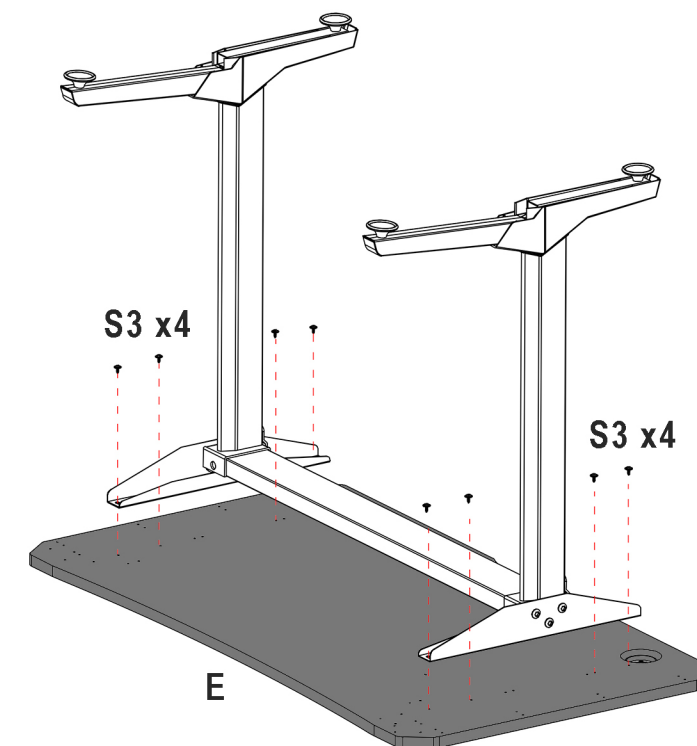


If the holes on both sides do not match,  
check that D1 and D2 are oriented correctly.


# 5

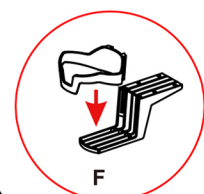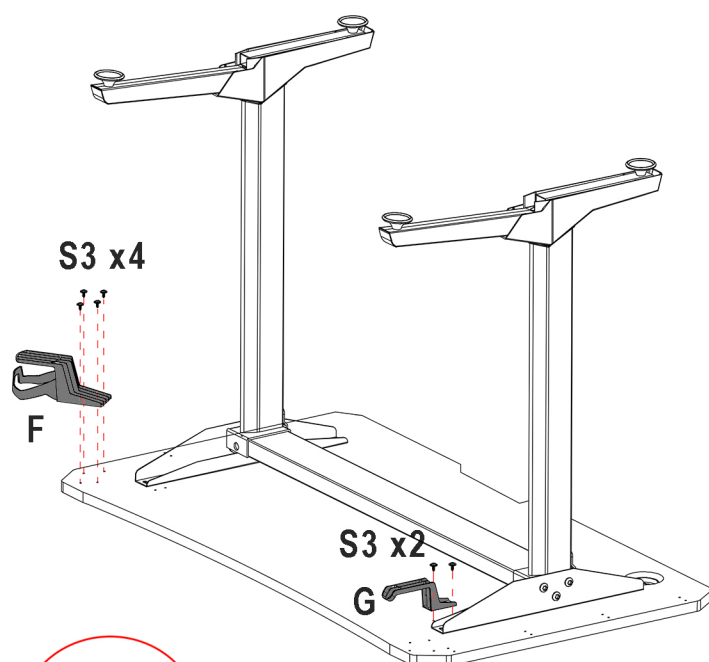

# 6

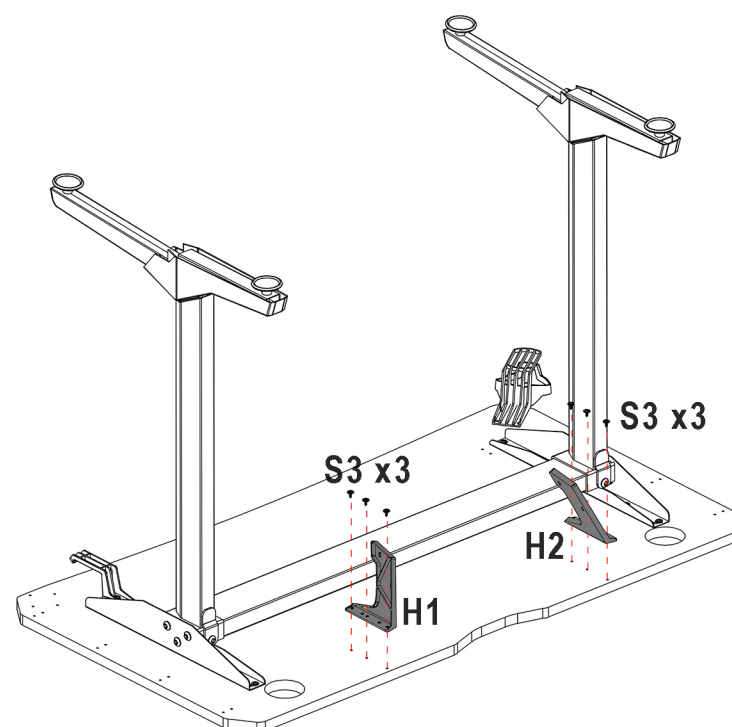

# 7

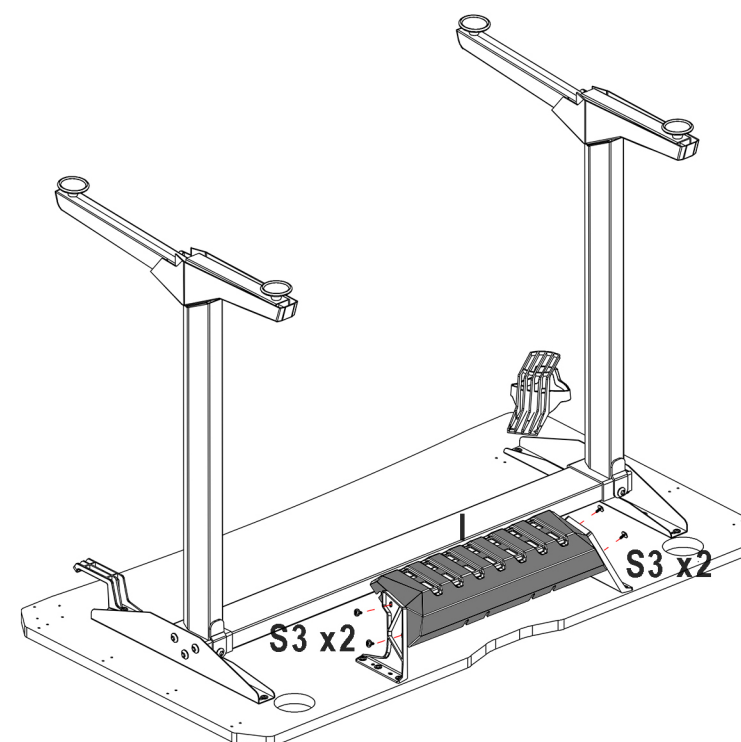

# 8

